

Original operating instructions



Operating instructions for lifting slings and round slings



Table of contents

Operating instructions for webbing slings 2

Operating instructions for round slings 26

HMPE and UHMW-PE round slings..... 48

Copyright © Dolezych GmbH & Co. KG	Status 04/2026
All rights and technical changes reserved.	BA-102 + 103 + 131EN



Operating instructions

Operating instructions for webbing slings

Valid for webbing slings, lifting slings, loop slings and bow slings of the following types

- DoColor
- DoLex
- DoLux
- DoPremium
- DoPlus
- One-way use webbing slings
- Special variants



Copyright © Dolezych GmbH & Co. KG	Status 04/2026
All rights and technical changes reserved.	BA-102 + 103 + 131EN

Imprint

Dolezych GmbH & Co. KG
Hartmannstraße 8
44147 Dortmund

Phone: +49 (0) 231 / 82 85 0
Fax: +49 (0) 231 / 82 77 82
Internet: www.dolezych.de
E-Mail: info@dolezych.de

Table of contents

1	Foreword	5
1.1	About these instructions.....	5
1.2	Symbols in the instructions.....	5
	Warnings of personal injury	5
	Warnings of property or environmental damage.....	5
	Other information.....	5
1.3	Limitation of liability.....	6
1.4	Special regulations and guidelines.....	6
2	Safety instructions.....	7
2.1	Intended use	7
2.2	General safety instructions	7
2.3	Safety instructions for one-way use webbing slings	8
2.4	Safety instructions for webbings slings made of Aramid	9
2.5	Safety instructions for stirrup-slings.....	9
2.6	Safety instructions for webbing slings with eyes.....	9
2.7	Safety instructions for multi-leg suspensions	10

Dolezych - Operating instructions

3	Product description.....	11
3.1	Product identification.....	11
	One-way use webbing slings	12
3.2	Labelling on the product.....	12
3.3	Application-orientated product selection	12
	Operating temperatures.....	13
	Chemical resistance	14
	Radiation.....	15
4	Testing and maintenance	16
4.1	Initial commissioning	16
4.2	Before each use.....	16
4.3	Regular inspection	16
	Dolezych repair service.....	17
4.4	Discard maturity	18
5	Application notes	19
5.1	Protection from sharp edges	19
5.2	Load factors and working load limit (WLL).....	20
5.3	Lifting configuration.....	20
	Choker hitch.....	20
	Basket hitch	21
5.4	Attachment to crane hooks	22
5.5	Attachment to the load.....	22
5.6	Balancing the load	22
5.7	Setting down the load.....	23
6	Storage and care.....	24
6.1	Storage	24
6.2	Cleaning.....	24
7	Disposal instructions.....	24
8	EC Declaration of Conformity.....	25

1 Foreword

1.1 About these instructions

These operating instructions are part of the scope of delivery.

Always keep the operating instructions ready to hand.

Read the operating instructions carefully before first use and observe the information when using the product.

Observe the safety instructions in the operating manual to avoid personal injury and damage to property.

1.2 Symbols in the instructions

Warnings of personal injury



This safety warning symbol and the associated signal word indicate important information for avoiding hazards that can lead to injuries or even death. The meaning of this signal word is explained in more detail below.

DANGER!	Extremely dangerous situation. Non-observance of the safety instruction will result in death or serious injury.
WARNING!	Dangerous situation. Non-observance of the safety instruction may result in death or serious injury.
CAUTION!	Dangerous situation. Non-observance of the safety instructions may result in minor injuries.

Warnings of property or environmental damage



This symbol indicates important instructions to avoid damage to the product or other objects as well as the surroundings (environment).

Other information



This symbol indicates other helpful information. This information is additionally marked with a frame.

1.3 Limitation of liability

Dolezych GmbH assumes no liability for damages caused by:

- Failure to observe these operating instructions
- Non-intended use
- Use of the product by untrained personnel
- Use of non-approved accessories / fitting parts
- Unauthorized modifications

1.4 Special regulations and guidelines

For safe handling of the product, special reference is made to the following applicable regulations and technical rules:

- EN 1492-1 – Textile slings – Safety – Part 1: Flat woven webbing slings made of man-made fibres for general purpose use
- EN 818-6 – Short link chain for lifting purposes – Safety
- EN 1677-1 - 4 – Components for slings – Safety
- DIN 60005 – Textile slings – Safety – Disposable flat woven slings, made of man-made fibres
- DGUV 109-017 – Operation of load handling attachments and slings in hoisting operations
- DGUV Information 209-061 – Use of lifting slings and round slings made of man-made fibres
- DGUV Information 209-013 – Slingers

If necessary, additional special regulations must be observed, e.g. for the transport of hazardous goods.

2 Safety instructions

2.1 Intended use

The product is used for slinging and lifting loads and may only be used:

- for loads that are suitable for this purpose due to their nature.
- by authorised and instructed persons.
- in compliance with the applicable regulations.

This is a professional product intended for commercial users.



According to DGUV 109-017 (formerly DGUV 100-500), webbing slings are lifting equipment and fulfil the requirements of DIN EN 1492 Part 1.

It is expressly forbidden to:

- modify the product.
- repair the product by non-specialist personnel.
- lengthen the product by knotting or interlocking it with other lifting devices.

2.2 General safety instructions

When lifting loads with slings, the persons under or next to the load are particularly at risk. There are residual dangers when handling slings. These are in particular:

- insufficiently secure connection from the sling to the load,
- swinging load when lifting and
- falling loads.

For safe handling of the product, the following instructions must be observed.

- Observe the working load limit (WLL)! The product must never be loaded beyond the specified load capacity.
- In the case of multi-leg suspensions, the maximum total load-bearing capacity of the legs used must not be exceeded.
- Observe temperature ranges.
- Avoid contact with chemicals.
- Do not load the product if it is knotted.
- Do not load the product if it is twisted.

Dolezych - Operating instructions

- Edge protectors must be used for sharp-edged loads or the product may only be used with a suitable coating (e.g. PU, minimum thickness 5 mm).



A sharp edge is already present if the edge radius of the load is smaller than the thickness of the product (see also p. **Fehler! Textmarke nicht definiert.**).

- In the case of endless slings, the seam must always be in the straight part of the sling.
- To prevent damage to the labelling, it must not be positioned in the lacing point or the load application point.
- Avoid tearing or jerky loads.
- Do not place loads on the product if this may damage the product.
- Never drag the load over the product.
- Do not pull the product out from under the load when the load is still on.
- Do not drag the product over floors or rough surfaces.
- Never leave the load in the sling if damage can result.
- Load the lifting hooks in the bowl of the hook. Lifting hooks must not be loaded on the tip.
- Fitting components must not be subjected to bending stresses.
- Suspension links/assemblies or shackles must be freely movable in the crane hook.
- Protect the product against flying sparks during cutting, grinding or welding work.
- If more than one sling is used to lift the load, they must be made of the same material (due to e.g., the same elongation values).

2.3 Safety instructions for one-way use webbing slings

In addition to the general safety instructions, the following requirements apply to one-way use webbing slings.

- One-way use webbing slings must not be reused after a single use.
- One-way use webbing slings must be destroyed at the end of the transport chain.



Dolezych one-way use webbing slings are manufactured according to DIN 60005 and are marked with an orange label.

2.4 Safety instructions for webbings slings made of Aramid

In addition to the general safety instructions, the following requirements apply to webbing slings made of Aramid.

- Webbing slings made of aramid must only be used in rooms with no UV radiation.



Webbing slings made of Aramid are marked with a white label.
Webbing slings made of Aramid are generally manufactured "in the style of"
EN 1492-1.

2.5 Safety instructions for stirrup-slings

In addition to the general safety instructions, the following requirements apply to stirrup-slings.

- The weld seam on the stirrup may only be subjected to tensile loads.
- Forces acting transversely to the weld seam (shear forces) must be avoided.

2.6 Safety instructions for webbing slings with eyes

In addition to the general safety instructions, the following requirements apply to webbing slings with eyes.

- When attaching to a hook, the loop length must be at least 3.5 times the maximum hook thickness.
- When attaching to a hook, the angle formed by the loop of the sling must not be greater than 20°.
- The part of a lifting device against which the webbing sling rests should be straight. Excessive curvature on the inside of the lifting device can lead to an uneven load on the webbing. This can damage the webbing.
EXCEPTION: If the carrying width of the webbing sling is less than 75 mm, the lifting device may have a bend. In this case, the radius of curvature should be 0.75 times the carrying width of the lifting strap.



2.7 Safety instructions for multi-leg suspensions

In addition to the general safety instructions, the following specifications apply to multi-leg suspensions:

- If not all legs are used in a load-bearing manner, the unused legs must be hung up in the suspension head. This prevents:
 - the legs from being damaged.
 - The then lower hanging hooks of the non-load bearing legs to cause:
 - Injuries to personnel or
 - Damages due to unintentional hanging
- If not all legs are used in a load-bearing manner, the labelled working load limit must be reduced by applying the corresponding utilization factor (see Table 1). In this case, two strands from different B-members must always be used.

Table 1: utilization factor for multi-leg suspensions

Type of suspension	Number of legs used	Utilization factor for marked working load limit
2-legged	1	1/2
3- and 4-legged	2	2/3
3- and 4-strängig	1	1/3

Example:

A four-legged suspension has a marked Working Load Limit of 6.300 kg at an inclination of 0° - 45°.

If only two legs are used at an inclination of 0° - 45°, the Working Load Limit is reduced to 4.200 kg.

$$6.300 \text{ kg} \cdot 2/3 = \underline{4.200 \text{ kg}}$$



For webbing suspensions, the load capacity of the entire suspension is indicated on the working load limit tag on the suspension link.
In accordance with DIN EN 1492-1, the working load limit is either omitted from the labels of the individual webbing sling strands or is labelled as 0 kg.

3 Product description



NOTE! Woven belt material is coloured. Colour pigments can be transferred from the belt material to the surface of the load through direct contact with surfaces.

- Avoid possible discolouration or marks by using suitable intermediate layers.

3.1 Product identification

The label prescribed by DIN EN 1492-1 is sewn into all Dolezych webbing slings. The information on the label is as follows:

- WLL = Working Load Limit = load-bearing capacity in the slinging type direct, stated in tons (exception for suspension ropes, see p. 10)
- Material:
 - PES = polyester, blue label
 - PA = polyamide, green label
 - PP = polypropylene, brown label
 - Aramid, white label
- Nominal length in metres
- Year of manufacture
- Manufacturer's label
- Traceability code
- GS mark and test centre (optional)
- CE mark
- Specification of the applicable standards



All Dolezych webbing slings are colour-coded for easy differentiation. Same sling colour = same load capacity. The eye reinforcements on DoPremium and DoWeb slings are colour-coded.

DoLux webbing slings do not follow this normative colour coding.

This is only a guide! Always check the information on the labelling before use!

Load capacity	Colour		Load capacity	Colour	
500 kg	Pink*		4 t	Grey	
1 t	Violet		5 t	Red	
1,5 t	Dark green*		6 t	Brown	
2 t	Green		8 t	Blue	
3 t	Yellow		10 tons and more	Orange	

* These colours are not specified in DIN EN 1492-1. These lifting slings are therefore manufactured "in accordance with" DIN EN 1492-1.

One-way use webbing slings

One-way use webbing slings are identified by an orange-coloured label.

One-way use webbing slings must be destroyed and disposed of at the end of the transport chain in accordance with DGUV Rule 109-017. The transport chain begins when the load is first attached (dispatch) and ends when the load is removed at the end user

3.2 Labelling on the product

The markings on the product have the following meaning.

	Carry out a visual inspection before use.
	Read the operating instructions.
	Carry out inspection according to checklist.
	WLL = Working Load Limit = Load capacity Never exceed the working load limit.
	Observe the specified operating temperatures.
	Do not use if there are cuts or knots.
	Observe the "sharp edge rule"
	Be careful with chemical contamination. Consult the manufacturer.

3.3 Application-orientated product selection

The following points must be observed in order to select a suitable product for the application:

- Mass of the load,
- Position of the load's centre of gravity,
- Position of the attachment points,
- intended type of hitch.

Dolezych - Operating instructions

The product must be selected so that it can support the load in such a way that it does not make any unwanted movements.

The criteria for the correct product selection are

- the type of product,
- the length of the product and
- the method of attachment to the load.

The product must be selected so that it is suitable for the environmental conditions at the place of use. Special environmental conditions can have a negative impact on the performance and stability of the product, meaning that the product may fail.

Special environmental conditions are:

- extreme temperatures,
- Radiation,
- Influence of chemical substances, especially acids, alkalis and solvents.

Operating temperatures

Depending on the material of which the product is made, the product may only be used and stored in the following temperature ranges.

Material	Suitable temperature range
Polyester (PES)	-40 °C to +100 °C
Polyamide (PA)	-40 °C to +100 °C
Polypropylene (PP)	-40 °C to + 80 °C
Aramid	-40 °C to +250 °C (continuous use)



NOTE! If moisture is present, ice can form at low temperatures. Ice crystals in the fabric can damage it. This damage can also occur invisibly inside the product. This damage can reduce the load-bearing capacity. Ice can restrict the flexibility of the product and make it unusable.

- Only use the product when it is completely dry!

Chemical resistance

The material from which the product is made has a selective resistance to chemicals. The material-dependent resistances are described below.

Material	Resistance at room temperature
polyester (PES)	Very resistant to mineral acids. Very sensitive to alkalis (lyes).
polyamide (PA)	Very resistant to alkalis (lyes). Very sensitive to mineral acids.
Polypropylene (PP)	Resistant to acids. Resistant to alkalis (lyes). Sensitive to solvents.
Aramid	Resistant to alkalis (lyes). Resistant to solvents. Sensitive to acids.



NOTE! Harmless alkaline or acid solutions can become so concentrated through evaporation that they can cause damage to the product. This damage can significantly reduce the load-bearing capacity of the product.

If the product has been contaminated, then:

- Take contaminated product out of service immediately
- Clean contaminated product with cold water
- Allow the product to air dry afterwards
- Do not artificially accelerate drying (e.g. by heating).
- Before using the product again, have it inspected by an expert.



If it is very likely that the product will come into contact with chemicals during use, additional information should be obtained from the Dolezych service team before use.

Radiation

The product is made of man-made fibres whose properties deteriorate when exposed to ultraviolet light.

The product should not be exposed to direct sunlight or other sources of ultraviolet radiation more than necessary.

The product must always be stored away from such sources of UV radiation.



NOTE! Aramid lifting slings are particularly sensitive to UV radiation. Therefore, these lifting straps may only be used in rooms without UV radiation.

4 Testing and maintenance

4.1 Initial commissioning

Before using the webbing slings for the first time, it must be ensured that:

- Identification and dimensions of the product correspond to the specifications,
- the certificate issued by the manufacturer is available,
- the labelling and working load limit (WLL) attached to the sling correspond to the specifications of the certificate

If one of these criteria is not met, the product must not be used.

4.2 Before each use

Before any further use of the webbing sling, it must be ensured that:

- the labelling on the product is present and legible,
- the product shows no damage or defects,
- the product is not ready to be discarded (see page 17)

If one of these criteria is not met, the product must not be used.

4.3 Regular inspection

In accordance with DGUV 109-017, the product is a sling. The product must therefore be inspected at intervals of no more than one year. The inspection must be carried out by a competent person.



Dolezych GmbH offers a testing service for lifting gear.

The slings can be tested either at the test centre in Dortmund, at the company or directly on site.

Depending on the operating conditions of the product, tests may be required at shorter intervals than one year.

Dolezych - Operating instructions

This applies, for example, to:

- particularly frequent use,
- increased wear,
- Corrosion or exposure to heat or
- if operating experience indicates an increased risk of damage.



Carry out regular visual inspections during the period of use. This is the only way to detect any damage that may affect the safe use of the product at an early stage.

To be inspected are:

- Fittings
- Connecting elements
- Labelling

The product must be taken out of service immediately for examination by a competent person if:

- there are doubts about the usability,
- the required labelling is missing (label or tag),
- damage or special events have occurred that could influence the load-bearing capacity.

Examples of faults and damage that impair permanent and safe use are

- Scuff marks on the surface,
- Longitudinal or cross cuts,
- Cuts or chafe marks on the edges of the lifting strap, stitches or loops,
- Chemical influence,
- Damage due to heat or friction,
- Damage to or deformation of fittings,
- Damage to abrasion or edge protection hoses.

Dolezych repair service

If the product is faulty, it can be repaired by an expert Dolezych specialist. This helps to save costs.



Never repair the product yourself!
Improper repairs can lead to product failure.

4.4 Discard maturity

The product must not be used once it has reached discard maturity.

Discard maturity is reached at:

- Missing or illegible labelling
- Damage to the cross-section of more than 10 % in relation to the width or thickness of the webbing.

Example: A 50 mm wide webbing sling may have a lateral cut of max. 5 mm. If several smaller cuts are recognisable on the opposite sides, these must be added together. A 2 mm incision on one side and a 3 mm incision on the opposite side therefore lead to discard maturity.

- Damage to the load-bearing seams
- Damage due to the influence of heat (friction, radiation).

This damage can be recognised by:

- glossy appearance of the fibres
- fused fibres

- Damage caused by the effects of aggressive substances.

This damage can be recognised by:

- the flaking of fibres
- Fibres that can be pulled out or rubbed off


- Deformations, cracks, fractures or other damage to components, such as:
 - Hook opening increased by more than 10 % of the nominal width
 - Wear in the hook bowl exceeding 5 %
 - Wear of suspension or end links exceeding 15 %

5 Application notes

5.1 Protection from sharp edges



NOTE! Sharp-edged loads and lifting equipment can damage the product and lead to failure! A sharp edge already exists if the edge radius r of the load is smaller than the thickness d of the product.

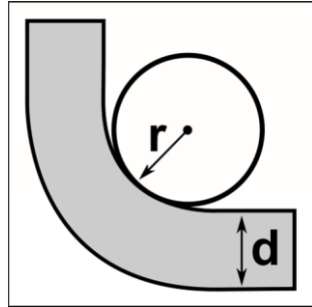

The following measures can be used to protect the product from sharp edges:

- Use edge protection tubes.
- Use products with integrated edge cut protection. When using these products, the edge cut protection must always be positioned between the product and the load or lifting device.
- DoLex coatings protect webbing slings from sharp edges.

A distinction is made between DoLex webbing slings with

- A coating firmly moulded to the webbing slings and
- With sliding DoLex profile hoses.



NOTE! DoLex coatings can be destroyed if they slide along a sharp edge! The DoLex solid coating must not be used

- if the load can move in the webbing sling
- during turning processes where there may be relative movement between the belt and the coating.

DoLex hoses must be used for these applications.

Turning operations have special requirements in terms of working load limit and hose length. The Dolezych service team will be happy to provide further information and answer any questions.

5.2 Load factors and working load limit (WLL)

The working load limit (WLL) specified on each product applies to the "direct" type of hitch. The working load limit of the product depends on the type of hitch used. The label shown in Figure 4 is located on each Dolezych product. This label shows the load factors for the common hitch types.

 
 
 
direkt	ge-schnürt	umgelegt	
LA = 1	LA = 0,8	LA = 2 ($\beta \leq 7^\circ$)	LA = 1,4 ($\beta \leq 45^\circ$) LA = 1 ($\beta \leq 60^\circ$)
			 ($\beta \leq 45^\circ$)  ($\beta \leq 60^\circ$)
			 ($\beta \leq 45^\circ$)  ($\beta \leq 60^\circ$)

Figure 1: Load-bearing capacity with common hitch types

β = angle of inclination (angle between the vertical and the sling)

LA = Load attachment factor (ratio of the possible working load limit to the working load limit in the "direct" hitch type)

Example:

Working load limit in direct hitch type
(LA = 1) = 10 tons

Working load limit in the choker hitch
(LA = 0.8) = 10 tons * 0.8 = 8 tons



Not every type of stop shown is suitable for every load stop.

5.3 Lifting configuration

Choker hitch

When using the product in a choker hitch, the following guidelines must be observed.

- In the choker hitch, the working load limit (WLL) of the product is only **80 %!**
- Only webbing slings with eyes with reinforced eyes may be used to attach loads with the "choker" attachment method.
- Lifting slings with high transverse rigidity, e.g. with fixed coating, may only be used with this type of hitch if they are equipped with fittings for the choker hitch.

Basket hitch



WARNING!

Risk of injury from falling load!

The slings can slip together when using the basket hitch. The load can shift and fall out of the slings.

- Only attach large loads in the basket hitch if the slings cannot slip together and the load cannot shift.
- Use spacers to prevent the slings from slipping together.



WARNING!

Risk of injury from falling load!

When slinging long, rod-shaped loads under lifting beams in the basket hitch, the load or parts of the load can shoot out to the side or bend in such a way that they slip out of the slings.

- Support the load so that it cannot bend.
- Forcibly prevent the crossbar from tilting.

OR

- Use the nature and surface of the load for slinging in such a way that the load or parts of it cannot shoot out.



Due to the existing hazards with the "basket hitch", this type of hitch should only be used in exceptional cases!
Instead, it is recommended to use the choker hitch.

5.4 Attachment to crane hooks

When using webbing slings with eyes, the eye length must be at least 3.5 times the maximum hook thickness.

When attaching to a hook, the angle formed by the eye of the sling must not be greater than 20° (Figure 2).

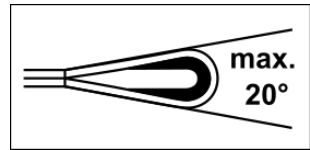


Figure 2: maximum opening angle of the eye

5.5 Attachment to the load

When attaching the product to the load, arrange it in such a way that:

- a uniform load is applied across the entire width of the product,
- there are no seams above the hook area or other lifting equipment,
- the seams are always in the straight part of the product,
- damage to the label is avoided by keeping it away from the load, hooks and lacing.



WARNING!

Risk of injury from falling load!

Strapping is not a suitable anchor point

- Never reach under the strapping!

5.6 Balancing the load

To lift the load without it twisting or turning over, the following conditions must be observed:

- For single-leg suspensions, the anchor point must be vertically above the load's centre of gravity.
- For 2-leg suspensions, the attachment points must be evenly spaced on both sides and above the load's centre of gravity.
- For 3- and 4-leg suspensions, the attachment points must be equally distributed in a plane around the load's centre of gravity and must be above the load's centre of gravity.



NOTE! It is essential to observe the angle of inclination β . The greater the angle of inclination, the lower the working load limit.

- Angles of inclination exceeding 60° are not permitted!

- In the case of 3- and 4-leg suspensions and uneven loading, only the working load limit of a 2-leg suspension may be assumed on the largest angle of inclination.
- If different angles of inclination occur with 2-leg suspensions (Figure 6), only the working load limit of a single leg may be taken as a basis.

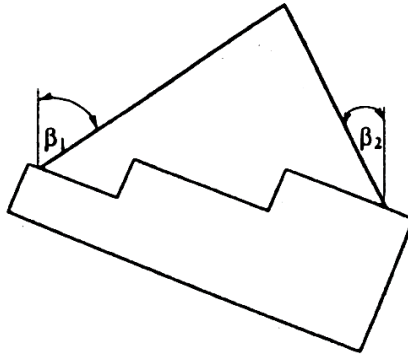


Figure 3: Example for unequal inclination angles β

Uneven load distribution is always to be expected when:

- the load is inelastic (e.g., concrete parts, castings, short beams).
- the position of the centre of gravity is not known.
- the load is unevenly shaped.
- different angles of inclination occur.

5.7 Setting down the load

The following guidelines must be observed when setting down the load.

- Prepare the set-down location so that the product is not trapped under the load (e.g. use wooden supports).
- Ensure that the load is secure!
- Do not remove the product until the load has been secured against tipping over and slipping.

6 Storage and care

6.1 Storage

Before storing the product, inspect it for damage that may have occurred during use.

Do not store damaged products.

Store the product on a shelf

- in a clean, dry and well-ventilated environment,
- away from heat sources.

During storage, contact must be avoided with

- Chemicals,
- flue gases,
- corroding surfaces,
- direct sunlight,
- other sources of ultraviolet radiation.

6.2 Cleaning

Clean the product with clean water only.

Do not use any chemical additives.

If the product has become wet due to cleaning or use, hang it up to dry.


Do not artificially accelerate the drying of the product (e.g. by heating).

7 Disposal instructions

Dolezych webbing slings are made from recyclable materials.

Once they have reached the end of their useful life, these webbing slings must be disposed of properly and in accordance with the local legal requirements.

Contamination of the webbing slings during use can impair their recyclability.

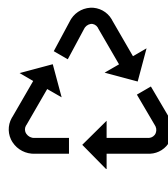

8 EC Declaration of Conformity

In accordance with the EC Machinery Directive 2006/42/EC

We hereby declare,

Dolezych GmbH & Co. KG
Hartmannstraße 8
44147 Dortmund



that the webbing slings, which were developed for lifting loads, comply with the following relevant regulations in the standard version:

EC Machinery Directive 2006/42/EC

DIN EN ISO 12100 Safety of machinery - General principles for design

DIN EN 1492-1 Textile slings - Safety – Part 1: Flat woven webbing slings made of man-made fibres for general purpose use

Dortmund; 30.10.2017


.....

Dipl. Ing. Thomas Schade
(Authorised representative)

In accordance with the EC Machinery Directive 2006/42/EC

We hereby declare,

Dolezych GmbH & Co. KG
Hartmannstraße 8
44147 Dortmund



that the standard version of the one-way use webbing slings designed for lifting loads complies with the following relevant regulations:

EC Machinery Directive 2006/42/EC

DIN EN ISO 12100 Safety of machinery - General principles for design

DIN 60005 Textile slings – Safety – Disposable flat woven slings, made of man-made fibres

Dortmund; 30.10.2017


.....

Dipl. Ing. Thomas Schade
(Authorised representative)

Operating instructions



Operating instructions for round slings

- DoForce 1 round slings
- DoForce 2 round slings
- DoWeb round slings
- DoStabil round slings
- DoPremium round slings
- DoMega heavy-duty round slings
- DoLeicht round sling suspensions
- Special designs



Copyright © Dolezych GmbH & Co. KG	Status 04/2026
All rights and technical changes reserved.	BA-103EN

Imprint

Dolezych GmbH & Co. KG

Hartmannstraße 8

44147 Dortmund

Phone: +49 (0) 231 / 82 85 0

Fax: +49 (0) 231 / 82 77 82

Internet: www.dolezych.de

E-Mail: info@dolezych.de

Table of contents

1	Foreword	29
1.1	About these instructions.....	29
1.2	Symbols in the instructions.....	29
	Warnings of personal injury	29
	Warnings of property or environmental damage	29
	Other information	29
1.3	Limitation of liability.....	30
1.4	Special regulations and guidelines.....	30
2	Safety instructions.....	31
2.1	Intended use	31
2.2	General safety instructions	31
2.3	Safety instructions for multi-leg suspensions	33
3	Product description.....	34
3.1	Product identification.....	34
3.2	Labelling on the product.....	35
3.3	Application-orientated product selection	35
	Operating temperatures.....	36
	Radiation.....	36
	Chemical resistance	37

Dolezych – Operating instructions

4	Testing and maintenance	38
4.1	Initial commissioning	38
4.2	Before each use.....	38
4.3	Regular inspection	38
	Dolezych repair service.....	39
4.4	Discard maturity	40
5	Application notes	41
5.1	Protection from sharp edges	41
5.2	Load factors and working load limit (WLL).....	42
5.3	Lifting configuration.....	42
	Choker hitch	42
	Basket hitch	43
5.4	Attachment to crane hooks	44
5.5	Attachment to the load.....	44
5.6	Balancing the load	44
5.7	Setting down the load.....	45
6	Storage and care	46
6.1	Storage	46
6.2	Cleaning.....	46
7	Disposal instructions	46
8	EC Declaration of Conformity.....	47

1 Foreword

1.1 About these instructions

These operating instructions are part of the scope of delivery.

Always keep the operating instructions ready to hand.

Read the operating instructions carefully before first use and observe the information when using the product.

Observe the safety instructions in the operating manual to avoid personal injury and damage to property.

1.2 Symbols in the instructions

Warnings of personal injury



This safety warning symbol and the associated signal word indicate important information for avoiding hazards that can lead to injuries or even death. The meaning of this signal word is explained in more detail below.

DANGER!	Extremely dangerous situation. Non-observance of the safety instruction will result in death or serious injury.
WARNING!	Dangerous situation. Non-observance of the safety instruction may result in death or serious injury.
CAUTION!	Dangerous situation. Non-observance of the safety instructions may result in minor injuries.

Warnings of property or environmental damage



This symbol indicates important instructions to avoid damage to the product or other objects as well as the surroundings (environment).

Other information



This symbol indicates other helpful information. This information is additionally marked with a frame.

1.3 Limitation of liability

Dolezych GmbH assumes no liability for damages caused by:

- Failure to observe these operating instructions
- Non-intended use
- Use of the product by untrained personnel
- Use of non-approved accessories / fitting parts
- Unauthorized modifications

1.4 Special regulations and guidelines

For safe handling of the product, special reference is made to the following applicable regulations and technical rules:

- EN 1492-2 – Textile slings – Safety – Part 2: Round slings made of man-made fibres for general purpose use
- EN 818-6 – Short link chain for lifting purposes – Safety
- EN 1677-1 - 4 – Components for slings – Safety
- DGUV 109-017 – Operation of load handling attachments and slings in hoisting operations
- DGUV Information 209-061 – Use of lifting slings and round slings made of man-made fibres
- DGUV Information 209-013 – Slings

If necessary, additional special regulations must be observed, e.g. for the transport of hazardous goods.

2 Safety instructions

2.1 Intended use

The product is used for slinging and lifting loads and may only be used:

- for loads that are suitable for this purpose due to their nature.
- by authorised and instructed persons.
- in compliance with the applicable regulations.

This is a professional product intended for commercial users.



According to DGUV 109-017 (formerly DGUV 100-500), round slings are lifting equipment and fulfil the requirements of EN 1492 Part 2.

It is expressly forbidden to:

- modify the product.
- repair the product by non-specialist personnel.
- lengthen the product by knotting or interlocking it with other lifting devices.

2.2 General safety instructions

When lifting loads with slings, the persons under or next to the load are particularly at risk. There are residual dangers when handling slings. These are in particular:

- insufficiently secure connection from the sling to the load,
- swinging load when lifting and
- falling loads.

For safe handling of the product, the following instructions must be observed.

- Observe the working load limit (WLL)! The product must never be loaded beyond the specified load capacity.
- In the case of multi-leg suspensions, the maximum total load-bearing capacity of the legs used must not be exceeded.
- Observe temperature ranges.
- Avoid contact with chemicals.
- Do not load the product if it is knotted.
- Do not load the product if it is twisted.
- Edge protectors must be used for sharp-edged loads or the product may only be used with a suitable coating (e.g. PU, minimum thickness 5 mm).

Dolezych – Operating instructions



A sharp edge is already present if the edge radius of the load is smaller than the thickness of the product (see also p. 41).

- The sewn area on the round sling hose must always be in the straight part of the round sling.
- To prevent damage to the labelling, it must not be positioned in the lacing point or the load application point.
- Reposition the round sling regularly between lifting operations to avoid overloading at certain points.
- Avoid tearing or jerky loads.
- Do not place loads on the product if this may damage the product.
- Never drag the load over the product.
- Do not pull the product out from under the load when the load is still on.
- Do not drag the product over floors or rough surfaces.
- Never leave the load in the sling if damage can result.
- Load the lifting hooks in the bowl of the hook. Lifting hooks must not be loaded on the tip.
- Fitting components must not be subjected to bending stresses.
- Suspension links/assemblies or shackles must be freely movable in the crane hook.
- Protect the product against flying sparks during cutting, grinding or welding work.
- If more than one sling is used to lift the load, they must be made of the same material (due to e.g., the same elongation values).
- The product must not be crushed or stacked.

2.3 Safety instructions for multi-leg suspensions

In addition to the general safety instructions, the following specifications apply to multi-leg suspensions:

- If not all legs are used in a load-bearing manner, the unused legs must be hung up in the suspension head. This prevents:
 - the legs from being damaged.
 - The then lower hanging hooks of the non-load bearing legs to cause:
 - Injuries to personnel or
 - Damages due to unintentional hanging
- If not all legs are used in a load-bearing manner, the labelled working load limit must be reduced by applying the corresponding utilization factor (see Table 1). In this case, two strands from different B-members must always be used.

Table 2: utilization factor for multi-leg suspensions

Type of suspension	Number of legs used	Utilization factor for marked working load limit
2-legged	1	1/2
3- and 4-legged	2	2/3
3- and 4-strängig	1	1/3

Example:

A four-legged suspension has a marked Working Load Limit of 6.300 kg at an inclination of 0° - 45°.

If only two legs are used at an inclination of 0° - 45°, the Working Load Limit is reduced to 4.200 kg.

$$6.300 \text{ kg} \cdot 2/3 = \underline{4.200 \text{ kg}}$$



For round sling suspensions, the load capacity of the entire suspension is indicated on the working load limit tag on the suspension link.

In accordance with EN 1492-2, the working load limit is either omitted from the labels of the individual round sling strands or is labelled as 0 kg.

3 Product description



NOTE! Woven belt material is coloured. Colour pigments can be transferred from the belt material to the surface of the load through direct contact with surfaces.

- Avoid possible discolouration or marks by using suitable intermediate layers.

3.1 Product identification

The label prescribed by EN 1492-s is sewn into all Dolezych round slings. The information on the label is as follows:

- WLL = Working Load Limit = load-bearing capacity in the slinging type direct, stated in tons (exception for suspension ropes, see p. 10)
- Material of the round sling core:
 - PES = polyester, blue label
 - PA = polyamide, green label
 - PP = polypropylene, brown label
- Nominal length in metres
- Year of manufacture
- Manufacturer's label
- Traceability code
- GS mark and test centre (optional)
- CE mark
- Specification of the applicable standards



All Dolezych round slings are colour-coded for easy differentiation. Same sling colour = same load capacity.

This is only a guide! Always check the information on the labelling before use!

Load capacity	Colour		Load capacity	Colour	
500 kg	Pink*		4 t	Grey	
1 t	Violet		5 t	Red	
1,5 t	Dark green*		6 t	Brown	
2 t	Green		8 t	Blue	
3 t	Yellow		10 tons and more	Orange	

* These colours are not specified in EN 1492-2. These lifting slings are therefore manufactured "in accordance with" EN 1492-2.

3.2 Labelling on the product

The markings on the product have the following meaning.

	Carry out a visual inspection before use.
	Read the operating instructions.
	Carry out inspection according to checklist.
	WLL = Working Load Limit = Load capacity Never exceed the working load limit.
	Observe the specified operating temperatures.
	Do not use if there are cuts or knots.
	Observe the "sharp edge rule"
	Be careful with chemical contamination. Consult the manufacturer.

3.3 Application-orientated product selection

The following points must be observed in order to select a suitable product for the application:

- Mass of the load,
- Position of the load's centre of gravity,
- Position of the attachment points,
- intended type of hitch.

The product must be selected so that it can support the load in such a way that it does not make any unwanted movements.

The criteria for the correct product selection are

- the type of product,
- the length of the product and
- the method of attachment to the load.

Dolezych – Operating instructions

The product must be selected so that it is suitable for the environmental conditions at the place of use. Special environmental conditions can have a negative impact on the performance and stability of the product, meaning that the product may fail.

Special environmental conditions are:

- extreme temperatures,
- Radiation,
- Influence of chemical substances, especially acids, alkalis and solvents.

Operating temperatures

Depending on the material of which the product is made, the product may only be used and stored in the following temperature ranges.

Material	Suitable temperature range
Polyester (PES)	-40 °C to +100 °C
Polyamide (PA)	-40 °C to +100 °C
Polypropylene (PP)	-40 °C to + 80 °C



NOTE! If moisture is present, ice can form at low temperatures. Ice crystals in the fabric can damage it. This damage can also occur invisibly inside the product. This damage can reduce the load-bearing capacity. Ice can restrict the flexibility of the product and make it unusable.

- Only use the product when it is completely dry!

Radiation

The product is made of man-made fibres whose properties deteriorate when exposed to ultraviolet light.

The product should not be exposed to direct sunlight or other sources of ultraviolet radiation more than necessary.

The product must always be stored away from such sources of UV radiation.

Chemical resistance

The material from which the product is made has a selective resistance to chemicals. The material-dependent resistances are described below.

Material	Resistance at room temperature
polyester (PES)	Very resistant to mineral acids. Very sensitive to alkalis (lyes).
polyamide (PA)	Very resistant to alkalis (lyes). Very sensitive to mineral acids.
Polypropylene (PP)	Resistant to acids. Resistant to alkalis (lyes). Sensitive to solvents.



NOTE! Harmless alkaline or acid solutions can become so concentrated through evaporation that they can cause damage to the product. This damage can significantly reduce the load-bearing capacity of the product.

If the product has been contaminated, then:

- Take contaminated product out of service immediately
- Clean contaminated product with cold water
- Allow the product to air dry afterwards
- Do not artificially accelerate drying (e.g. by heating).
- Before using the product again, have it inspected by an expert.



NOTE! The chemical influence of aggressive substances must be carefully analysed, especially in the case of round slings. It is not sufficient to check the cover, as the twine fabric inside may be damaged even though the cover is intact.



If it is very likely that the product will come into contact with chemicals during use, additional information should be obtained from the Dolezych service team before use.

4 Testing and maintenance

4.1 Initial commissioning

Before using the round slings for the first time, it must be ensured that:

- Identification and dimensions of the product correspond to the specifications,
- the certificate issued by the manufacturer is available,
- the labelling and working load limit (WLL) attached to the sling correspond to the specifications of the certificate

If one of these criteria is not met, the product must not be used.

4.2 Before each use

Before any further use of the round sling, it must be ensured that:

- the labelling on the product is present and legible,
- the product shows no damage or defects,
- the product is not ready to be discarded (see page 17)

If one of these criteria is not met, the product must not be used.

4.3 Regular inspection

In accordance with DGUV 109-017, the product is a sling. The product must therefore be inspected at intervals of no more than one year. The inspection must be carried out by a competent person.



Dolezych GmbH offers a testing service for lifting gear.

The slings can be tested either at the test centre in Dortmund, at the company or directly on site.

Depending on the operating conditions of the product, tests may be required at shorter intervals than one year.

Dolezych – Operating instructions

This applies, for example, to:

- particularly frequent use,
- increased wear,
- Corrosion or exposure to heat or
- if operating experience indicates an increased risk of damage.



Carry out regular visual inspections during the period of use. This is the only way to detect any damage that may affect the safe use of the product at an early stage.

To be inspected are:

- Round sling hose
- Fittings
- Connecting elements
- Labelling

The product must be taken out of service immediately for examination by a competent person if:

- there are doubts about the usability,
- the required labelling is missing (label or tag),
- damage or special events have occurred that could influence the load-bearing capacity.

Examples of faults and damage that impair permanent and safe use are

- Scuff marks on the surface,
- Longitudinal or cross-sectional cuts in the cover,
- Damage to the seam of the cover,
- Visible core,
- Chemical influence,
- Damage due to heat or friction,
- Damage to or deformation of fittings,
- Damage to abrasion or edge protection hoses.

Dolezych repair service

If the product is faulty, it can be repaired by an expert Dolezych specialist. This helps to save costs.



Never repair the product yourself!
Improper repairs can lead to product failure.

4.4 Discard maturity

The product must not be used once it has reached discard maturity.

Discard maturity is reached at:

- Missing or illegible labelling
- Damage to the cover so that the load bearing core of the round sling is visible.
- Damage to the load-bearing core (repair is not possible in this case)
- Damage due to the influence of heat (friction, radiation).

This damage can be recognised by:


- glossy appearance of the fibres of the cover
- fused fibres
- Damage caused by the effects of aggressive substances.
This damage can be recognised by:
 - the flaking of fibres
 - Fibres that can be pulled out or rubbed off
- Deformations, cracks, fractures or other damage to components, such as:
 - Hook opening increased by more than 10 % of the nominal width
 - Wear in the hook bowl exceeding 5 %
 - Wear of suspension or end links exceeding 15 %

5 Application notes

5.1 Protection from sharp edges



NOTE! Sharp-edged loads and lifting equipment can damage the product and lead to failure! A sharp edge already exists if the edge radius **r** of the load is smaller than the thickness **d** of the product.

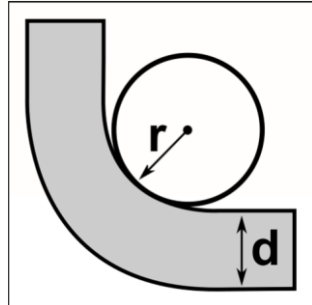

The following measures can be used to protect the product from sharp edges:

- Use edge protection tubes.
- Use products with integrated edge cut protection. When using these products, the edge cut protection must always be positioned between the product and the load or lifting device.



Dolezych cut protection hoses and *DoLex* hoses protect round slings from sharp edges.



NOTE! Round slings with edge protection sleeves are only suitable for lifting and not for turning. Too much heat is generated in the edge area during the turning process.

5.2 Load factors and working load limit (WLL)

The working load limit (WLL) specified on each product applies to the "direct" type of hitch. The working load limit of the product depends on the type of hitch used. The label shown in Figure 4 is located on each Dolezych product. This label shows the load factors for the common hitch types.

direkt	ge-schnürt	umgelegt	
LA = 1	LA = 0,8	LA = 2 ($\beta \leq 7^\circ$)	LA = 1,4 ($\beta \leq 45^\circ$) LA = 1 ($\beta \leq 60^\circ$)
			
			

Figure 4: Load-bearing capacity with common hitch types

β = angle of inclination (angle between the vertical and the sling)

LA = Load attachment factor (ratio of the possible working load limit to the working load limit in the "direct" hitch type)

Example:

Working load limit in direct hitch type

(LA = 1) = 10 tons

Working load limit in the choker hitch

(LA = 0.8) = 10 tons * 0.8 = 8 tons



Not every type of stop shown is suitable for every load stop.

5.3 Lifting configuration

Choker hitch

When using the product in a choker hitch, the working load limit (WLL) of the product is only **80 %!**



NOTE! A jerky tightening may occur when the load is picked up. The resulting friction can damage the product.

- Manually tighten the unloaded round sling as far as possible before lifting the load.



NOTE! To prevent damage to the labelling, it must not be located in the choking point.

Basket hitch



WARNING!

Risk of injury from falling load!

The slings can slip together when using the basket hitch. The load can shift and fall out of the slings.

- Only attach large loads in the basket hitch if the slings cannot slip together and the load cannot shift.
- Use spacers to prevent the slings from slipping together.



WARNING!

Risk of injury from falling load!

When slinging long, rod-shaped loads under lifting beams in the basket hitch, the load or parts of the load can shoot out to the side or bend in such a way that they slip out of the slings.

- Support the load so that it cannot bend.
- Forcibly prevent the crossbar from tilting.

OR

- Use the nature and surface of the load for slinging in such a way that the load or parts of it cannot shoot out.



Due to the existing hazards with the "basket hitch", this type of hitch should only be used in exceptional cases!

Instead, it is recommended to use the choker hitch.

5.4 Attachment to crane hooks

When using round slings with stitched eyes, the eye length must be at least 3.5 times the maximum hook thickness.

When attaching to a hook, the angle formed by the eye of the sling must not be greater than 20° (Figure 2).

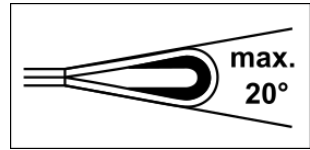


Figure 5: maximum opening angle of the eye

5.5 Attachment to the load

When attaching the product to the load, arrange it in such a way that:

- a uniform load is applied across the entire width of the product,
- there are no seams above the hook area or other lifting equipment,
- the seams are always in the straight part of the product,
- damage to the label is avoided by keeping it away from the load, hooks and lacing.
- it does not overlap itself or other round slings.



WARNING!

Risk of injury from falling load!

Strapping is not a suitable anchor point

- Never reach under the strapping!

5.6 Balancing the load

To lift the load without it twisting or turning over, the following conditions must be observed:

- For single-leg suspensions, the anchor point must be vertically above the load's centre of gravity.
- For 2-leg suspensions, the attachment points must be evenly spaced on both sides and above the load's centre of gravity.
- For 3- and 4-leg suspensions, the attachment points must be equally distributed in a plane around the load's centre of gravity and must be above the load's centre of gravity.



NOTE! It is essential to observe the angle of inclination β : The greater the angle of inclination, the lower the working load limit.

- Angles of inclination exceeding 60° are not permitted!

- In the case of 3- and 4-leg suspensions and uneven loading, only the working load limit of a 2-leg suspension may be assumed on the largest angle of inclination.
- If different angles of inclination occur with 2-leg suspensions (Figure 6), only the working load limit of a single leg may be taken as a basis.

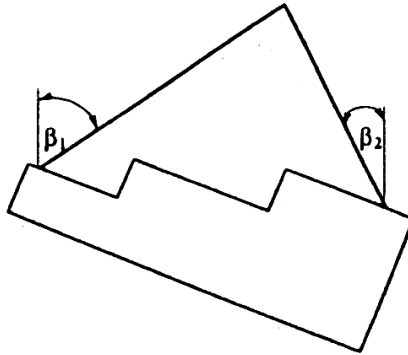


Figure 6: Example for unequal inclination angles β

Uneven load distribution is always to be expected when:

- the load is inelastic (e.g., concrete parts, castings, short beams).
- the position of the centre of gravity is not known.
- the load is unevenly shaped.
- different angles of inclination occur.

5.7 Setting down the load

The following guidelines must be observed when setting down the load.

- Prepare the set-down location so that the product is not trapped under the load (e.g. use wooden supports).
- Ensure that the load is secure!
- Do not remove the product until the load has been secured against tipping over and slipping.

6 Storage and care

6.1 Storage

Before storing the product, inspect it for damage that may have occurred during use.

Do not store damaged products.

Store the product on a shelf

- in a clean, dry and well-ventilated environment,
- away from heat sources.

During storage, contact must be avoided with

- Chemicals,
- flue gases,
- corroding surfaces,
- direct sunlight,
- other sources of ultraviolet radiation.

6.2 Cleaning

Clean the product with clean water only.

Do not use any chemical additives.

If the product has become wet due to cleaning or use, hang it up to dry.


Do not artificially accelerate the drying of the product (e.g. by heating).

7 Disposal instructions

Dolezych round slings are made from recyclable materials.

Once they have reached the end of their useful life, these round slings must be disposed of properly and in accordance with the local legal requirements.

Contamination of the round slings during use can impair their recyclability.

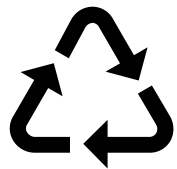

8 EC Declaration of Conformity

In accordance with the EC Machinery Directive 2006/42/EC



We hereby declare,

Dolezych GmbH & Co. KG
Hartmannstraße 8
44147 Dortmund

that the round slings designed for lifting loads comply with the following relevant regulations in the standard version:

EC Machinery Directive 2006/42/EC

DIN EN ISO 12100 Safety of machinery - General principles for design

DIN EN 1492-2 – Textile slings - Safety – Part 2: Round slings made of man-made fibres for general purpose use

Dortmund; 30.10.2017

A handwritten signature in black ink, appearing to read 'Th. Schade', is written over a horizontal dotted line.

Dipl. Ing. Thomas Schade
(Authorised representative)

Original operating instructions



HMPE and UHMW-PE round slings

- *DoUltra* round slings
- HMPE round slings



Copyright © Dolezych GmbH & Co. KG	Status 04/2026
All rights and technical changes reserved.	BA-131EN

Imprint

Dolezych GmbH & Co KG
Hartmannstr. 8
44147 Dortmund

Tel: +49 (0) 231 / 82 85 0
Fax: +49 (0) 231 / 82 77 82
Internet: www.dolezych.de
E-Mail: info@dolezych.de

Table of contents

1	Foreword	51
1.1	About these instructions	51
1.2	Symbols in the instructions	51
	Warnings of personal injury	51
	Warnings about damage to property	51
	Other information	51
1.3	Limitation of liability	52
1.4	Special regulations and guidelines	52
2	Safety instructions	52
2.1	Intended use	52
2.2	General safety instructions	53
2.3	Safety instructions for multi-strand hangers	55
3	Product description	56
3.1	Product identification	56
3.2	Labelling on the product	57
3.3	Application-orientated product selection	57
	Chemical resistance	58
	Operating temperatures	59
	Radiation	59

Dolezych – Operating instructions

4	Testing and maintenance	60
4.1	Initial commissioning	60
4.2	Before each use.....	60
4.3	Regular inspection	60
	Dolezych repair service.....	61
4.4	Discard maturity	61
5	Application notes	63
5.1	Protection from sharp edges	63
5.2	Load factors and load capacity (WLL).....	64
5.3	Stop types.....	64
	Lacing.....	64
	Overhead walkway	65
5.4	Attachment to the load.....	66
5.5	Balancing the load	66
5.6	Setting down the load.....	67
6	Storage and care	68
6.1	Storage	68
6.2	Cleaning.....	68
7	Disposal instructions.....	69
8	EC Declaration of Conformity.....	69
9	Examination protocol (copy template).....	70

1 Foreword

1.1 About these instructions

These operating instructions are part of the scope of delivery.

Always keep the operating instructions to hand.

Read the operating instructions carefully before first use and observe the information when using Dolezych products.

Observe the safety instructions in the operating instructions to avoid personal injury and damage to property.

1.2 Symbols in the instructions

Warnings of personal injury



This safety warning symbol and the associated signal word indicate important information to avoid hazards that could lead to injury or even death. The meaning of this signal word is explained in more detail below.

DANGER!	Extremely dangerous situation. Failure to observe the safety instructions will result in death or serious injury.
WARNING!	Dangerous situation. Failure to observe the safety instructions can result in death or serious injury.
CAUTION!	Dangerous situation. Failure to observe the safety instructions may result in minor injuries.

Warnings about damage to property



This symbol indicates important information to prevent damage to the product or other objects.

Other information



This symbol indicates other helpful information. This information is also marked with a frame.

1.3 Limitation of liability

Dolezych GmbH accepts no liability for damage caused by:

- Failure to observe these operating instructions,
- non-intended use,
- Use of the product by untrained personnel,
- Use of unauthorised accessories,
- unauthorised conversions.

1.4 Special regulations and guidelines

For safe handling of the product, please refer in particular to the following applicable regulations and technical rules:

- DIN EN 1492-2 - Round slings made of man-made fibres
- EN 818-6 – Short link chain for lifting purposes – Safety
- EN 1677-1 - 4 – Components for slings – Safety
- DGUV 109-017 - Operation of load handling attachments and slings in hoisting operations
- DGUV Information 209-061 - Use of lifting slings and round slings made of man-made fibres
- DGUV Information 209-013 - Slingers

Additional special regulations may need to be observed, e.g. for the transport of hazardous goods.

2 Safety instructions

2.1 Intended use

The product is used for slinging and lifting loads and may be used for lifting:

- may only be used for loads that are suitable for this purpose due to their nature.
- may only be used by authorised and instructed persons.
- may only be used in compliance with the applicable regulations.



According to DGUV 109-017 (formerly DGUV 100-500), round slings are lifting equipment and fulfil the requirements of DIN EN 1492 Part 2.

Round slings with HMPE or UHMW-PE fibres and/or a braided sheath construction are manufactured in accordance with DIN EN 1492 Part 2.

It is expressly forbidden to use the product:

- to modify,
- by non-specialist personnel,
- by knotting it with other lifting gear or interlocking it.

This is a professional product intended for commercial users.

2.2 General safety instructions

When lifting loads with slings, the people under or next to the load are particularly at risk. There are residual hazards when handling slings. These are in particular

- insufficiently secure connection from the sling to the load,
- swinging load when lifting and
- falling loads.

The following instructions must be observed to ensure safe handling of the product.

- Observe the maximum load capacity (WLL)! The product must never be loaded beyond the specified load capacity.
- In the case of multi-strand hangers, the maximum total load-bearing capacity of the strands used must not be exceeded.
- Observe temperature ranges.
- Avoid contact with chemicals.
- Edge protectors must be used for sharp-edged loads or the product may only be used with a suitable coating (e.g. PU, minimum thickness 5 mm).



A sharp edge already exists if the edge radius of the load is smaller than the thickness of the product.

- The sewn area on the round sling hose must always be in the straight part of the round sling.
- Reposition the round sling regularly between lifting operations to avoid overloading at certain points.
- Do not load the product if it is knotted.
- Do not load the product if it is twisted.
- Avoid tearing or jerky loads.
- Do not place any loads on the product if this could damage the product.
- Never drag the load over the product.

Dolezych – Operating instructions

- Do not pull the product out from under the load if the load is still on.
- Do not drag the product across floors or rough surfaces.
- Never leave the load in the sling if damage can result.
- Load the lifting hooks in the bowl of the hook. Lifting hooks must not be loaded on the tip.
- Fitting components must not be subjected to bending stresses.
- Suspension links/assemblies or shackles must be freely movable in the crane hook.
- Protect the product against flying sparks during cutting, grinding or welding work.
- If more than one sling is used to lift the load, they must be made of the same material (e.g. due to the same elongation values).
- To prevent damage to the labelling, it must not be positioned in the lacing point or load application point.
- The product must not be crushed or stacked.

2.3 Safety instructions for multi-strand hangers

In addition to the general safety instructions, the following specifications apply to multi-strand hangers.

- If not all strands are used as load-bearing, the unused strands must be hung up in the suspension head. This prevents
 - the strands are damaged
 - due to the hooks hanging lower on the non-load-bearing strands:
 - persons are injured or
 - Damage caused by unintentional hanging.
- If not all strands are used load-bearing, the specified total load-bearing capacity of the hanger must be reduced by applying the corresponding utilisation factor (see **Fehler! Verweisquelle konnte nicht gefunden werden.**). In this case, two strands from different B-links must always be used.

Table 1: Utilisation factors for multi-strand hangers

Type of hanger	Number of individual strands used	Utilisation factor for the specified load capacity
2-strand	1	1/2
3- and 4-strand	2	2/3
3- and 4-strand	1	1/3

Example:

A four-legged hanger has a specified total load capacity of 6,300 kg at a sling angle of 0° - 45°.

If only two strands are used at an angle of 0° - 45°, the total load capacity is reduced to 4,200 kg.

$$6,300 \text{ kg} * 2/3 = \underline{4,200 \text{ kg}}$$



For round sling hangers, the load capacity of the entire hanger is indicated on the load capacity tag on the suspension link.

In accordance with DIN EN 1492-2, the load capacity is either omitted from the labels of the individual round sling strands or is labelled as 0 kg.

3 Product description



NOTE! Woven and/or braided material is coloured. Colour pigments can be transferred from the belt material to the surface of the load through direct contact with surfaces.

- Avoid possible discolouration or marks by using suitable intermediate layers.

3.1 Product identification

The label prescribed by DIN EN 1492-2 is attached to all Dolezych round slings. The information on the label is as follows:

- WLL = Working Load Limit = load capacity in direct slinging mode, stated in tonnes
- Material of the round sling core:
 - PES (polyester) = blue label
 - HMPE or UHMWPE (high molecular weight or ultra-high molecular weight polyethylene) = white label



The material of the hose or the outer abrasion protection may differ from the material of the round sling core (inner yarn fabric).

- Nominal length in metres
- Year of manufacture
- Manufacturer's label
- Traceability code
- GS mark and test centre (optional)
- CE mark
- Specification of the applicable standards



The label on Dolezych *DoUltra* round slings is attached to a protective sleeve for protection. This protective sleeve is not abrasion protection.



All round slings made of HMPE or UHMW-PE are manufactured "in accordance with" DIN EN 1492-2, as the material is not described in this standard.

All round slings with a WLL of 10 t or more must have an orange cover in accordance with the colour code of DIN EN 1492-2.



Round slings made of HMPE under 10 t have a separate colour coding. The *DoUltra* with a load capacity of 8 t, for example, has a blue protective sleeve to comply with the colour coding according to DIN EN 1492-2.

3.2 Labelling on the product

The markings on the product have the following meaning.

	Carry out a visual inspection before use.
	Read the operating instructions.
	Carry out inspection according to checklist.
	WLL = Working Load Limit = Load capacity Never exceed the working load limit.
	Observe the specified operating temperatures.
	Do not use if there are cuts or knots.
	Observe the "sharp edge rule".
	Be careful with chemical contamination. Consult the manufacturer.

3.3 Application-orientated product selection

The following points must be observed in order to select a suitable product for the application:

- Mass of the load,
- Position of the load's centre of gravity,
- Position and type of attachment points,
- intended stop method.

The product must be selected so that it can support the load in such a way that it does not make any unwanted movements.

The criteria for the correct product selection are

- the type of product,
- the length of the product and
- the method of attachment to the load.

The product must be selected so that it is suitable for the environmental conditions at the place of use. Special environmental conditions can have a

negative impact on the performance and stability of the product, meaning that the product may fail.

Special environmental conditions are:

- Influence of chemical substances, especially acids, alkalis and solvents.
- extreme temperatures,
- Radiation

Chemical resistance

The material from which the product is made has a selective resistance to chemicals. The material-dependent resistances are described below.

Material	Resistance at room temperature
polyester (PES)	Very resistant to mineral acids. Very sensitive to alkalis (lyes).
Ultra-high molecular weight polyethylene, Dyneema® (UHMW-PE)	Very resistant to acids. Very resistant to alkalis (lyes).



NOTE! Harmless alkaline or acid solutions can become so concentrated through evaporation that they can cause damage to the product. This damage can significantly reduce the load-bearing capacity of the product.

If the product has been contaminated, then:

- Take contaminated product out of service immediately
- Clean contaminated product with cold water
- Allow the product to air dry afterwards
- Do not artificially accelerate drying (e.g. by heating).
- Before using the product again, have it inspected by a qualified person.



NOTE! The chemical influence of aggressive substances must be carefully analysed, especially in the case of round slings. It is not sufficient to check the cover, as the twine fabric inside may be damaged even though the cover is intact.



If it is very likely that the product will come into contact with chemicals during use, additional information should be obtained from the Dolezych service team before use.

Operating temperatures

Depending on the material of which the product is made, the product may only be used and stored in the following temperature ranges.

Material	Suitable temperature range
HMPE or UHMWPE = high molecular weight or ultra-high molecular weight polyethylene	-40 °C to +70 °C



NOTE! If moisture is present, ice can form at low temperatures. Ice crystals in the fabric can damage it. This damage can also occur invisibly inside the product. This damage can reduce the load-bearing capacity. Ice can restrict the flexibility of the product and make it unusable.

- Only use the product when it is completely dry!

Radiation

The product is made of man-made fibres whose properties deteriorate when exposed to ultraviolet light.

The product should not be exposed to direct sunlight or other sources of ultraviolet radiation more than necessary.

The product must always be stored away from such sources of UV radiation.

4 Testing and maintenance

4.1 Initial commissioning

Before using the lifting gear for the first time, it must be ensured that:

- Identification and dimensions of the product correspond to the specifications,
- the factory certificate issued by the manufacturer is available,
- the labelling and working load limit (WLL) attached to the sling correspond to the specifications of the certificate

If one of these criteria is not met, the product must not be used.

4.2 Before each use

Before any further use of the lifting gear, it must be ensured that:

- the labelling on the product is present and legible,
- the product shows no damage or defects,
- the product is not ready to be discarded (see page).17

If one of these criteria is not met, the product must not be used.

4.3 Regular inspection

In accordance with DGUV 109-017, the product is a sling. The product must therefore be inspected at intervals of no more than one year. The inspection must be carried out by a competent person.



Dolezych GmbH offers a testing service for lifting gear.

The slings can be tested either at the test centre in Dortmund, at the company or directly on site.

Depending on the operating conditions of the product, tests may be required at shorter intervals than one year.

Dolezych – Operating instructions

This applies, for example, to:

- particularly frequent use,
- increased wear,
- Corrosion or exposure to heat or
- if operating experience indicates an increased risk of damage.



Carry out regular visual inspections during the period of use. This is the only way to detect any damage that may affect the safe use of the product at an early stage.

must be checked:

- Round sling hose
- Fittings
- Connecting elements
- Labelling

The product must be taken out of service immediately for examination by a competent person if:

- there are doubts about the usability,
- the required labelling is missing (label or tag),
- damage or special events have occurred that could influence the load-bearing capacity.

Examples of faults and damage that impair permanent and safe use are

- Excessive / questionable abrasion marks on the surface,
- Longitudinal or cross-sectional cuts in the coating,
- Damage to the seam of the casing,
- visible core,
- chemical influence,
- Damage due to heat or friction,
- Damage to or deformation of fittings,
- Damage to abrasion or edge protection hoses.

Dolezych repair service

If the product is faulty, it can be repaired by an expert Dolezych specialist. This helps to save costs.



Never repair the product yourself!
Improper repairs can lead to product failure.

4.4 Discard maturity

The product must not be used once it has reached discard maturity.

The discard maturity is reached at:


- missing or illegible labelling
- Damage to the sheathing so that the load-bearing twine of the round sling is visible
- Damage to the load-bearing scrim (repair is excluded in this case)
- Damage due to the influence of heat (friction, radiation). This damage can be recognised by
 - glossy appearance of the fibres of the coating
 - fused fibres
- Damage caused by the effects of aggressive substances.
- Deformations, cracks, fractures or other damage to components, such as:
 - Hook opening increased by more than 10 % of the nominal width
 - Wear in the hook bowl exceeding 5 %
 - Wear of suspension or end links exceeding 15 %

5 Application notes

5.1 Protection from sharp edges



NOTE! Sharp-edged loads and lifting equipment can damage the product and lead to failure! A sharp edge already exists if the edge radius r of the load is smaller than the thickness d of the product.

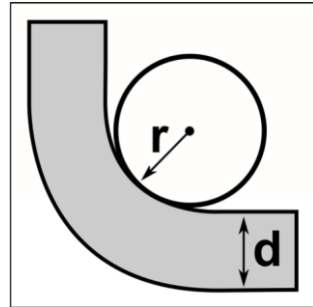

The following measures can be used to protect the product from sharp edges:

 
 
- Use edge protection tubes.
- Use products with integrated edge cut protection. When using these products, the edge cut protection must always be positioned between the product and the load or lifting device.



Dolezych cut protection hoses and *DoLex* hoses protect round slings from sharp edges.

5.2 Load factors and load capacity (WLL)

The load capacity (WLL) specified on each product applies to the "direct" type of sling. The load capacity of the product depends on the type of sling used. The label shown in **Fehler! Verweisquelle konnte nicht gefunden werden.** is located on each Dolezych product. This label shows the load stop factor for the common stop types.

direkt	ge-schnürt	umgelegt	
LA = 1	LA = 0,8	LA = 2 ($\beta \leq 7^\circ$)	LA = 1,4 ($\beta \leq 45^\circ$) LA = 1 ($\beta \leq 60^\circ$)
			
			
			
			

β = angle of inclination (angle between the vertical and the sling)

LA = Load attachment factor (ratio of the possible load capacity to the load capacity in the "direct" attachment type)

Example:

Load capacity in the direct sling type (LA = 1) = 10 tonnes

Load capacity in the laced slinging type (LA = 0.8) = 10 tonnes * 0.8 = 8 tonnes

Figure1 : Load-bearing capacity with common types of attachment



Not every type of stop shown is suitable for every load stop.

5.3 Stop types

Lacing

When using the product in a lacing system, the load-bearing capacity (WLL) of the product is only **80 %!**



NOTE! A jerky tightening may occur when the load is picked up. The resulting friction can damage the product.

- Manually tighten the unloaded round sling as far as possible before lifting the load.



NOTE! To prevent damage to the labelling, it must not be located in the lacing point.

Overhead walkway



WARNING!

Risk of injury from falling load!

The slings can slip together when suspended. The load can shift and fall out of the slings.

- Only attach large loads in the suspended aisle if the lifting gear cannot slip together with these loads and the load cannot shift.



WARNING!

Risk of injury from falling load!

When slinging long, rod-shaped loads under lifting beams in the suspended aisle, the load or parts of the load can shoot out to the side or bend in such a way that they slip out of the slings.

- Support the load so that it cannot bend.
- Forcibly prevent the crossbar from tilting.

OR

- Use the nature and surface of the load for slinging in such a way that the load or parts of it cannot shoot out.



Due to the existing hazards with the "hanging gait" attachment method, this attachment method should only be used in exceptional cases!
Instead, it is recommended to use the lacing method.

5.4 Attachment to the load

When attaching the product to the load, arrange it in such a way that:

- a uniform load is applied across the entire width of the product,
- there are no seams above the hook area or other lifting equipment,
- the seams are always in the straight part of the product,
- damage to the label is avoided by keeping it away from the load, hooks and lacing.
- it does not overlap itself or other round slings.



WARNING!

Risk of injury from falling load!

Strapping is not a suitable anchor point

- Never reach under the strapping!

5.5 Balancing the load

To lift the load without it twisting or tipping over, the following conditions must be met:

- For single-fall slings, the attachment point must be positioned vertically above the load's centre of gravity.
- For 2-fall hangers, the attachment points must be positioned evenly on both sides and above the centre of gravity of the load.
- For 3- and 4-fall slings, the attachment points must be evenly distributed in a plane around the load's centre of gravity and be above the load's centre of gravity.



NOTE! It is essential to observe the angle of inclination β : The greater the angle of inclination, the lower the load-bearing capacity.

- Angles of inclination greater than 60° are not permitted!

- For 3- and 4-legged hangers and uneven loads, only the load-bearing capacity of a 2-legged hanger may be assumed, depending on the maximum angle of inclination.

Dolezych – Operating instructions

- If different angles of inclination occur with 2-legged hangers (**Fehler! Verweisquelle konnte nicht gefunden werden.**), only the load-bearing capacity of a single leg may be used as a basis.

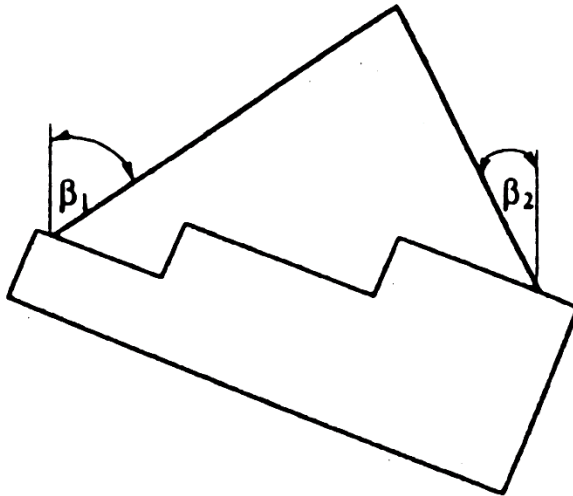


Figure 2: Example of unequal inclination angles β

Uneven load distribution is always to be expected if:

- the load is inelastic (e.g. concrete parts, castings, short beams)
- the position of the centre of gravity is not known
- the load is unevenly shaped
- different angles of inclination occur

5.6 Setting down the load

The following guidelines must be observed when setting down the load.

- Prepare the set-down location so that the product is not trapped under the load. (For example, use wooden supports.)
- Ensure that the load is secure!
- Do not remove the product until the load has been secured against tipping over and slipping.

6 Storage and care

6.1 Storage

Before storing the product, inspect it for damage that may have occurred during use.

Do not store damaged products.

Store the product on a shelf

- in a clean, dry and well-ventilated environment,
- away from heat sources.

During storage, contact must be avoided with

- Chemicals,
- flue gases,
- corroding surfaces,
- direct sunlight,
- other sources of ultraviolet radiation.

6.2 Cleaning

Clean the product with clean water only.


Do not use any chemical additives.

If the product has become wet due to cleaning or use, hang it up to dry.

Do not artificially accelerate the drying of the product (e.g. by heating).

7 Disposal instructions

Once these round slings have reached the end of their useful life, they must be disposed of properly and in accordance with the local legal requirements.

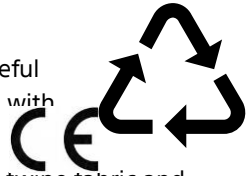

In the case of round slings with different materials for the twine fabric and round sling hose, these must be separated from each other before disposal.

8 EC Declaration of Conformity

In accordance with the EC Machinery Directive 2006/42/EC

We hereby declare,

Dolezych GmbH & Co. KG
Hartmannstraße 8
44147 Dortmund

that the round slings designed for slinging loads comply with the following relevant regulations in the standard version:

EC Machinery Directive 2006/42/EC

DIN EN ISO 12100 Safety of machinery - General principles for design

DIN EN 1492-2 Textile slings - Safety - Part 2: Round slings of man-made fibres for general purposes

Dortmund; 20 November 2024


.....

Dipl. Ing. Thomas Schade
(Authorised representative)

9 Examination protocol (copy template)

Product description:	
Product number:	
Ident. no:	

Periodic inspections

Test date	Findings	Signature
To be completed by the operator	Testing before initial commissioning	

